

THS TIP SHEET

Models: Philips 22HFL5531H

1. Low Power Standby:

You need to change low power standby to the No setting by following the directions below.

All new sets come from factory with low power standby set to yes. This feature lowers power consumption when the set is in the off-mode by turning off the standby power to the side panel buttons.

Menu>Configuration>Features>Low Power Standby>set to No

2. AUTO INSTALL PROGRAM:

Run Auto Install to 100%.

- Note there are two stages, Initialization and Progress.
- This may take up to 25 minutes to program depending on cable system.
- Once the process has begun, **do not interrupt**. Interruption will result in loss of programming. (locked)

What does Locked mean?

If you see "Locked" appear on the screen:

- This indicates that the set has been force tuned to a channel that is not in memory. **Make sure start channel is active by following the channel install direction below.** Being in the locked mode will not prevent you from following these directions.
- The TV being locked can be caused by one of three things:
 1. All channels in memory have been deleted.

2. The Switch-on channel is set to a deleted channel (TV may come from factory set to switch on to channel 2.)
3. Set has been force tuned to a deleted channel with the green remote (pendant and patient remote are not capable of force tuning.)

Channel Install – Used to install or delete channels after the auto install has been completed.

- Used to manually add and delete channels. Add X to Ring number to add. Remove X to delete.
- HD channels can be reassigned to other number slots by changing Major and Mpeg or by using Digital Scroll.
- Input can be changed to reassign a channel as an input. (AV, S-Vid, CVI, HDMI, VGA).

3. DVD Installation:

Use Channel Install to assign DVD input to a channel.

Menu>Channel Install

1. Highlight **INPUT** then select AV, S-Vid, CVI (Pr Pb Y & Audio L&R), HDMI or VGA.
2. Add channel to memory. **Rings (1X) (2X) (3X) (4X)**

Pendant Interface: Be sure to use the jumper attached to set

Note: New **26, 32, 42, HFL** models ending with **1** use a 3 pole jumper. The new 22" set still uses a 4 pole jumper. (tv side only)

How to distinguish:

- 3 pole jumpers have 2 black insulators rings on the 1/8" plug.
- 4 pole jumpers have 3 black insulator rings on the 1/8" plug.

Pendant Setup – Be sure to follow the directions below to insure proper pendant operation.

Menu>Communication

- **Communication** type should always be **SP-SPI** for use with pillow speaker.
- **Pendant Yes/No**, set to **YES**. (enables channel select and digital functions. Does not affect audio.)
- **Store** All changes made in Communication menu must be stored.

Loudspeaker mute:

Menu>Configuration>Features>Loudspeaker Mute>set to YES.

Note: Pendant audio is always present regardless of settings.

Determine Pillow Speaker Type

1. Pendants with thumbwheel or beds with non-digital controls.

Menu>Configuration>Switch-On / OSD>Switch-on volume>set to desired level.

2. Pendants with digital audio control. (volume banner appears on screen when volume button is pressed)

Menu>Configuration>Switch-On / OSD>Switch-on volume>set to Standard.

USB Cloning

Note: USB Stick must be preformatted for use with 22HFL5531, 22HFL5530, 26HFL5830, 32HFL5860 and 42HFL5860.

Format USB memory stick

- Insert USB stick in computer and open root directory. (Should be empty)
- Create a folder (file>new>folder) then name the folder **SSB_NVM** (upper case)
- Click to open the folder, then create another folder and name it **ChannelTable** (no spacing)
- Ready to be uploaded from master set.

Menu>Smartclone

Load TV information to USB memory stick:

Manually program first set then press Menu>Smartclone>Source, set to USB>select TV to USB>Start.

Transfer Clone data to unprogrammed set:

Menu>Smartclone>Source, set to USB>select USB to TV>Start.

Note: Allow set 3 minutes to program. Do not interrupt process until 100% complete. It is normal for set to cycle on an off during the loading cycle.

To test for completion press recall button. If Recall menu is displayed the process is complete.

For additional help: 800-535-2459