

THS TIP SHEET

Models: Philips 26HFL5561H
Philips 32HFL5561H
Philips 42HFL5581H

1. Low Power Standby :

You need to change low power standby to the No setting by following the directions below.

All new sets come from factory with low power standby set to yes. This feature lowers power consumption when the set is in the off-mode by turning off the standby power to the side panel buttons.

- **Menu>Configuration>SmartFeatures>Low Power Standby>Set to NO**

2. AUTO INSTALL PROGRAM:

Run Auto Install to 100%.

- There are two stages, Initialization and Progress.
- This may take up to 25 minutes to program depending on your cable system.
- Once the process has begun, **do not interrupt**. All programming may be deleted.

What does Locked mean?

If you see “Locked” appear on the screen:

- This indicates that the set has been force tuned to a channel that is not in memory. **Make sure start channel is active by**

following the channel install direction below. Being in the locked mode will not prevent you from following these directions.

- **The TV being locked can be caused by one of three things:**
 1. All channels in memory have been deleted.
 2. The Switch-on channel is set to a deleted channel (TV may come from factory set to switch on to channel 2.)
 3. Set has been force tuned to a deleted channel with the green remote (pendant and patient remote are not capable of force tuning.)

Channel Install – Used to install or delete channels after the auto install has been completed.

- Used to manually add and delete channels. Add X to Ring number to add. Remove X to delete.
- HD channels can be reassigned to other number slots by changing Major and Mpeg settings or by using Digital Scroll.
- Input can be changed to reassign the channel as an input. (AV, S-Vid, CVI, HDMI, VGA).

3. DVD Installation:

Use Channel Install to assign DVD input to a channel.

Menu>Channel Install

1. Highlight **INPUT** then select AV, S-Vid, CVI (Pr Pb Y & Audio L&R), HDMI or VGA.
2. Add channel to memory by adding X. **Rings (1X) (2X) (3X) (4X).**

Pendant Interface: Be sure to use the jumper attached to the set.

Note: New **26, 32, 42, HFL** models ending with **1** use a **3 pole jumper**. The new 22" set still uses a **4 pole jumper** (TV side only.)

How to distinguish:

- 3 pole jumpers have 2 black insulators rings on the 1/8” plug.
- 4 pole jumpers have 3 black insulator rings on the 1/8” plug.

4. Pendant Setup:

Please be sure to follow the directions below to insure proper pendant operation.

Menu>Communication

- **Communication** type should always be **SP-SPI** for use with pillow speaker.
- **Pendant Yes/No**, set to **YES**. (enables channel select and digital functions. Does not affect audio.)
- **Store** All changes made in Communication menu must be stored.

Loudspeaker mute:

Menu>Configuration>Audio Features>Loudspeaker Mute>set to YES.

Note: Pendant audio is always present regardless of settings.

Bathroom spkr out type should always be set to Variable.

Determine Pillow Speaker Type

1. Pendants with thumbwheel or beds with non-digital controls.

Menu>Configuration>Switch-On / OSD>Switch-on volume>set to desired level.

2. Pendants with digital audio control. (volume banner appears on screen when volume button is pressed)

Menu>Configuration>Switch-On / OSD>Switch-on volume>set to Standard.

5. USB Cloning:

Cloning is now done using a USB stick instead of a clone box. Follow the instructions below and be sure to only clone like models.

Menu>Smartclone

Load TV information to USB memory stick:

Manually program first set then press Menu>Smartclone>Source, set to USB>select TV to USB>Start.

Transfer Clone data to unprogrammed set:

Menu>Smartclone>Source, set to USB>select USB to TV>Start.

Note: Allow set 3 minutes to program. Do not interrupt process until 100% complete. It is normal for set to cycle on an off during the loading cycle.

To test for completion press recall button. If Recall menu is displayed the process is complete.

For additional help: 800-535-2459