

SET-UP PROCEDURE FOR L-10D IN NONE RENTAL ACCOUNTS

Connect the L-10D to a source of power and RF signal. In order to ensure proper reception of the available TV channels, the RF signal must be identical to that provided at the intended installation. For that reason it is recommended that the TV be set-up at the intended installation.

Turn on the L-10D (Picture display may take up to 10 seconds)
Press the Set-UP button on the Staff Remote
Set Language
Set Rental to Basic Paid (This will disable the Self Rent function)

CHANNEL SET-UP ITEMS

Assign all Channel Maps to Map 1
Perform Auto Scan in DTV Menu
Add all channels to Map 1
Remove Scrambled Channels if desired
Video mode should not be changed from TV

FEATURES SET-UP

Set the Marquee for all rental modes to 0
Set Speaker to ON or OFF
Set Program Guide to ON or OFF (The Guide is only available on digital channels and all digital channels do not provide a Program Guide)
Set Aspect ON or OFF
Set CCD ON or OFF
Ensure that Computer mode is set to ON (This is required for Clone Programmer)
Set Blocking ON or OFF
Exit Set-Up and tune through all channels to ensure that all wanted channels are present (Perform additional ADD or DELETE if necessary)
Programming is now complete