


# LC200F9F

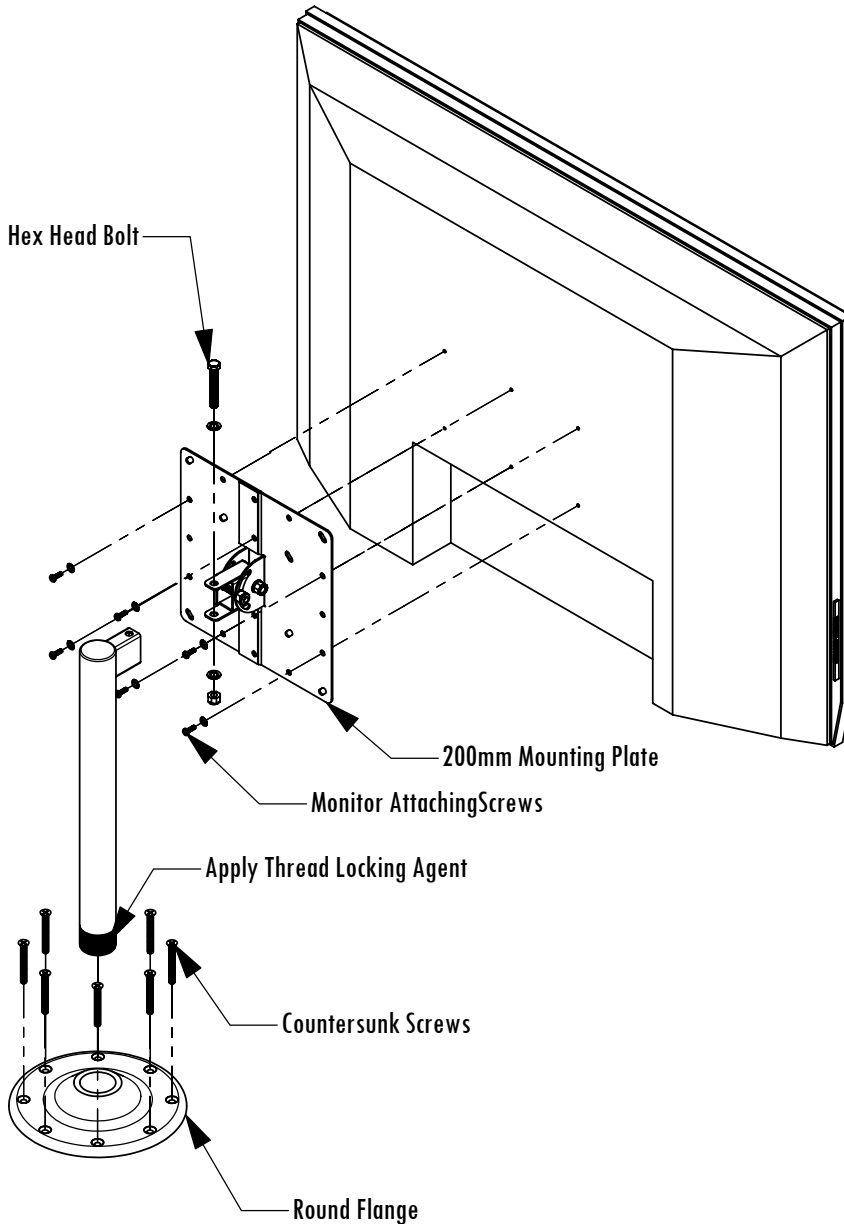

1. Remove the Hex Head Bolt from the LC200F9F Pivot.
2. Attach the 200mm Mounting Plate to the monitor with screws appropriate for your monitor. The correct mounting screw size are specified by the monitor manufacturer. An assortment of monitor attaching hardware is available for standard monitor threaded inserts.
3. Attach the Round Flange to the countertop with the provided Countersunk Tapping Screws.
4. Apply two drops of thread locking agent to the LC200F9F pipe threads and thread pipe into the Round Flange. Make sure the pipe is facing in the direction desired once tight.
5. Lift the monitor with attached 200mm Mounting Plate to the LC200F9F Pivot Point. Replace the Hex Head Bolt removed in step 1 and tighten the pivot point.
6. Adjust the monitor tilt tension.

### Hardware Kit

- 6 ... #14 x 2" Countersunk Tapping Screws
- 1 ... 1/2ml Tube HM128 Thread Locking Agent
- 6 ... 4mm x 12mm Phillips Screws
- 6 ... 4mm x 25mm Set Screws
- 12 ... 4mm Hex Nuts
- 6 ... 5mm x 12mm Phillips Screws
- 6 ... 5mm x 30mm Set Screws
- 12 ... 5mm Hex Nuts
- 36 ... 5mm Flat Washers
- 6 ... 6mm x 12mm Phillips Screws
- 6 ... 6mm x 30mm Set Screws
- 12 ... 6mm Hex Nuts
- 18 ... 1/4" Flat Washers